

# User Instructions

## Battery Charger, Model CHG 200A

---

### Rechargeable Batteries

We recommend using only BAT 026 AA Ni-Cad batteries. These batteries will last about 45-50 hours per charge when used with Williams Sound Receivers. Batteries from other suppliers may provide shorter operating life.

### Using The CHG 200A Battery Charger

- 1) Plug the CHG 200's power supply into the Power Jack on the back of the unit and a standard AC wall outlet.
- 2) Wrap the power cord around the Cord Hook (See Figure 1.) This will minimize strain on the cord and jack and insure that the power cord is not detached during charging.
- 3) Make sure the units to be charged are turned OFF.
- 4) Place the units in the slots so that the CHG 200's Charging Pins and unit's side panel contacts are coupled.  
(See Figure 1.)

### **!! WARNING !!**

---

#### **DO NOT ATTEMPT TO RECHARGE DISPOSABLE BATTERIES!**

The batteries may heat up and burst, causing possible injury and damage to the equipment.

Avoid shorting the plus and minus battery terminals together with metal objects. Battery damage and burns can result!

Use only Williams Sound supplied chargers and batteries!

Make sure that the charging contact holes line up with the charging pins. The units should drop easily into the slots. **DO NOT FORCE THEM IN BACKWARDS.**

- 5) The Charging Indicators will light, indicating that charging is in process.

It takes about 14 hours to fully charge the batteries.

### Suggestions

Units should not be left charging continuously when not in use.  
Units should always be turned OFF while charging.

It's best to allow the batteries to fully discharge before charging.  
Repeatedly charging the batteries after short periods of use (1-2 hours) will shorten battery life.  
Rechargeable batteries will need to be replaced after 1-2 years of use.

Figure 1: Using The CHG 200 A

