



Personal PA® R35 Receiver

Instructions For Use & Care

OPERATING INSTRUCTIONS

1. Install two (2) AA alkaline or NiMH rechargeable batteries. If you're using rechargeable batteries, they must be charged before using.
2. Plug the earphone into the "EAR" jack on the top of the unit.
3. Turn the receiver on by rotating the volume control knob clockwise. The receiver's ON indicator should illuminate green.
4. Adjust the volume for your comfort.
5. To turn the receiver off, rotate the volume control knob counter-clockwise until it clicks off. The receivers' ON indicator should go dark.

Note: To maximize battery life, turn the receiver off when it's not in use.

EARPAD CLEANING

Do not immerse the earphone in water or other cleaning agent. Foam pads may be removed and washed with a mild laundry soap solution, rinsed thoroughly, and air-dried. Foam pads may also be replaced with new pads.

BATTERY INFORMATION

Alkaline batteries (BAT 001):	80 hours
Rechargeable NiMH batteries (BAT 026):	50 hours per charge

Batteries from other suppliers may provide different operating life.

NOTE: The ON indicator will illuminate RED to indicate a low battery.

INSTALLING AND REPLACING BATTERIES

1. Open the battery compartment by lifting the tab on the back of the receiver with a finger.
2. To remove depleted batteries, pull up on the fabric strip.
3. If Alkaline (non-rechargeable) batteries are being installed, slide the →



battery selection switch above the battery compartment to the “Alkaline” position. If installing NiMH (or rechargeable) batteries, slide the battery selection switch to the “NiMH” position.

4. Press the batteries into place over the fabric strip. **Be sure to observe proper polarity (+/-).** Damage due to improper battery installation may void the warranty on the product. Close the lid.
5. When the sound becomes weak or distorted, replace or recharge batteries.

BATTERY CHARGING

Rechargeable batteries must be charged overnight before first time use. Drop-in charger points are located on the bottom of the R35 unit. For charger availability, please contact Williams Sound at (800) 843-3544.

CHANNEL TUNING

First, set the transmitter to the desired channel. Remove the antenna and connect an audio source. Move the receiver 25 feet away from the transmitter for tuning. Open the battery compartment on the R35 by lifting the tab on the back of the receiver with a finger. Locate the metal tuning slug above the batteries next to the “Channel Tuning” label. Using a small screw driver or tuning wand, turn the tuning slug in a counter-clockwise direction about two turns. Then, slowly turn the tuning slug in the clockwise direction until the signal is heard. There may be two signal points heard. The one which is received first is a false response. Be sure to continue tuning slightly further to the correct point, which will be much louder. Tune back and forth to find the center of the point of best response to the program being heard.

WARRANTY NOTICE

The PPA R35 receiver is covered by a FIVE (5) year warranty EXCLUDING earphones, headphones, batteries, chargers, cables, antennas, carry cases, and all other accessory products. Accessory products carry a 90 day warranty.

Product exposed to abuse, extreme temperature, humidity, human sweat, salt water and chemicals is NOT covered under the product warranty.