


# CHG 2100 Multiple Battery Charger

21 Unit Charger. For use with BAT AP97A NiMH Rechargeable Batteries.

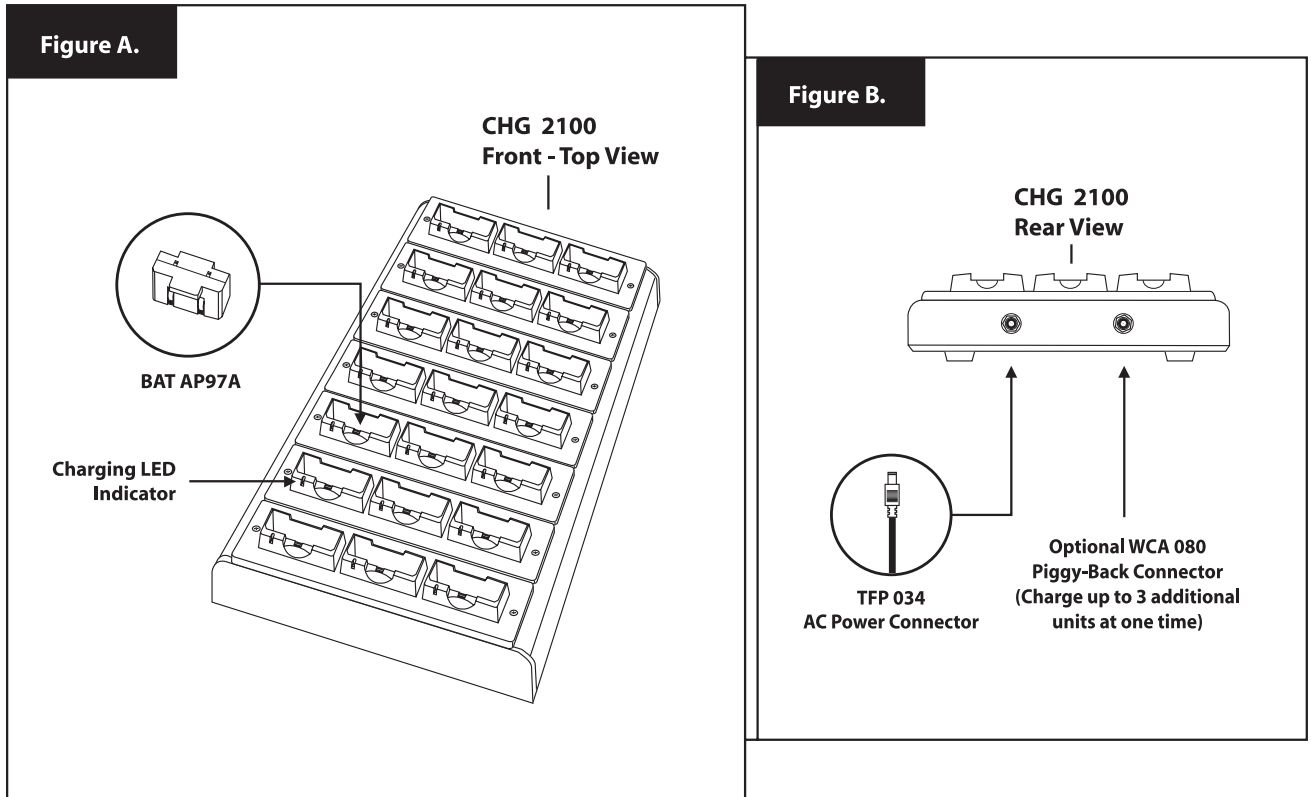

## Instructions for Use and Care

- 1.) Plug the TFP 034 power supply into the AC wall outlet. Plug the power connector into the rear of the CHG 2100 unit (Figure B.).

**WARNING: DO NOT ATTEMPT TO CHARGE NON-RECHARGEABLE BATTERIES.**

**Non-rechargeable batteries, such as alkaline and carbon zinc, may heat up and burst, causing possible injury and damage to the equipment.**

- 2.) Insert the AP97A NiMH rechargeable battery into the charging dock as illustrated in Figure A above. A red LED indicator will illuminate when charging has started (Figure A).
  - You may charge up to 21 battery units per CHG 2100 charger.
  - It will take approximately 14 hours to fully charge the batteries.

**Linking Multiple CHG 2100 Chargers:**

The CHG 2100 can be connected to up to three additional units by piggy-back cable (not included). This allows up to 84 AP97A NiMH rechargeable batteries to be charged at once.



## **CHG 2100 Multiple Battery Charger Specifications**

---

<b>Size:</b>	6" W x 1 1/2" H x 9 3/4" D
<b>Weight:</b>	1.3 lbs (.59 kg)
<b>Color:</b>	Black
<b>Power Input:</b>	100 - 240 AC input
<b>Power Supply:</b>	Switching AC adaptor, 12VDC - 1.25A
<b>Charging Rate:</b>	Overnight Charge: 14 mA Trickle/Maintain: 8 mA
<b>Charging Time:</b>	14 hours nominal
<b>Unit Capacity:</b>	21 Units
<b>Indicators:</b>	Individual Charging Indicators: Red LEDs

---

### **WARRANTY**

---

The CHG 2100 Multiple Charger is warranted against defects in workmanship and materials for ONE YEAR (cables and power supply are warranted for 90 days). This warranty does not extend to intentional or accidental physical damage. This warranty applies only to products returned to Williams Sound for service. To return a CHG 2100 for service, call the phone number below and request a Return Authorization (RA) number.

**Williams Sound Corp.**  
**10399 West 70th Street,**  
**Eden Prairie, MN 55344-3459 USA**

**Phone:** 800-843-3544 / 612-943-2252  
**Fax:** 612-943-2174  
**TTY:** 612-943-9675  
**Web:** [www.williamssound.com](http://www.williamssound.com) /  
[info@williamssound.com](mailto:info@williamssound.com)